



JW11100-E200

FIG. 20 TRANSAXLE & BRAKE

REF. NO.	PART NO.	DESCRIPTION	JW11				REMARKS
28	JW1-G6153-00	.COLLAR, GUIDE	1				
29	JW1-G6128-00	.SPACER, BEARING	2				
30	JW1-G6117-00	.SHIM, RING GEAR	1				
31	JW1-G4314-00	.SPACER	1				
32	JW1-G6387-00	.BEARING, PLAIN 1	1				
33	JW1-G6388-00	.BEARING, PLAIN 2	1				
34	JW1-G6164-00	.BEARING 1	2				
35	JW1-G6165-00	.BEARING 2	2				
36	JW1-G6166-00	.BEARING 3	1				
37	JW1-F2176-00	.BEARING	2				
38	JW1-G6102-00	.BEARING ASSY	1				
39	JW1-G5552-00	.BEARING, PLAIN	1				
40	JW1-G6167-00	.BEARING 4	2				
41	JW1-G4135-00	.SPRING	3				
42	JW1-G6375-00	.SPRING, RETURN 1	1				
43	JW1-G6312-00	.CASE, TRANSMISSION 2	1				
44	JW1-G6311-00	.CASE, TRANSMISSION 1	1				
45	JW1-F384K-00	.BALL, SEAT	1				
46	JW1-G6338-00	.FORK, SHIFT	1				
47	JW1-G6415-00	.PINION, DIFFERENTIAL	2				
48	JW1-G6542-00	.HUB	2				
49	JW1-G6326-00	.GEAR, WHEEL 1	1				
50	JW1-G6327-00	.GEAR, WHEEL 2	1				
51	JW1-G6335-00	.SHAFT 1	1				
52	JW1-G6348-00	.SHAFT 2	1				
53	JW1-G6356-00	.GEAR, IDLER	1				
54	JW1-G6349-00	.SHAFT 3	1				