



G-14 - G-22 SERIES CARGO BOX INSTALLATION INSTRUCTIONS

04-008

INCLUDED:

- 2 MAIN BRACKETS
- BAGWELL BRACKET
- 2 CARGO BOX BRACKETS



Main Brackets



Bagwell Bracket



Cargo Box Brackets

1
Take off canopy by removing upper strut hardware that secures canopy to front and rear struts. Retain hardware you will need it later.



2
Remove lower strut bolts and remove rear struts.



Remove OEM front seat backs.
Retain hardware.

3

Remove motor cover.



4



Remove front seat.

5

Remove OEM front seat
supports. Retain hardware.



6



Insert main brackets into holes where OEM front seat supports were removed. Be sure the tabs are pointed to the cart's CENTER, as shown. Secure the main brackets with hardware retained in step 6.

Remove bagwell bolts. Then using a 5/16 drill bit, drill through the vehicle frame where the hardware was removed.



Attach bagwell bracket to cart using 8mm x 70mm hardware provided and tighten.

10

Reinstall motor cover.






11
Install cargo box brackets to main brackets using 10mm x 25mm hardware provided, hand tighten.

12
Attach cargo box bracket to bagwell bracket using 10mm x 25mm hardware, hand tighten.



13
Attach cargo box using 10mm x 40mm hardware. Once all bolts are in place tighten all hardware.

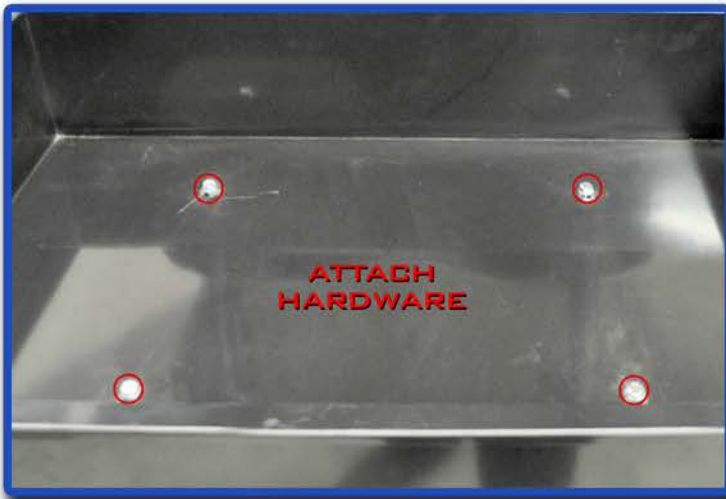

G-14 - G-22 SERIES CARGO BOX HARDWARE PACKS

- (2) 8MM X 70MM SHOULDER HEX BOLTS (BAGWELL BRACKET TO CART)
- (4) 8MM FLAT WASHERS
- (2) 8MM ANTI SLIP NUTS
- (4) 10MM X 40MM SHOULDER HEX BOLTS (CARGO BOX TO MOUNTING BRACKET)
- (4) 10MM X 25MM SHOULDER HEX BOLTS (MOUNT BRACKETS TO MAIN BRACKETS & BAGWELL BRACKET)
- (16) 10MM FLAT WASHERS
- (8) 10MM ANTI SLIP NUTS

GO TO WWW.MYMADJAX.COM FOR INSTALLATION VIDEOS